





**QUICK OPERATION GUIDE FOR
HRS-31**

**** Connect the unit to power bank with the supplied DC-USB cable or put in 2*CR123 batteries**

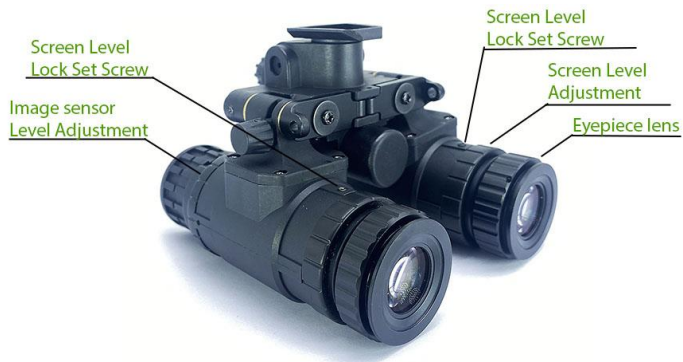

*HRS-31 Basic Model displayed

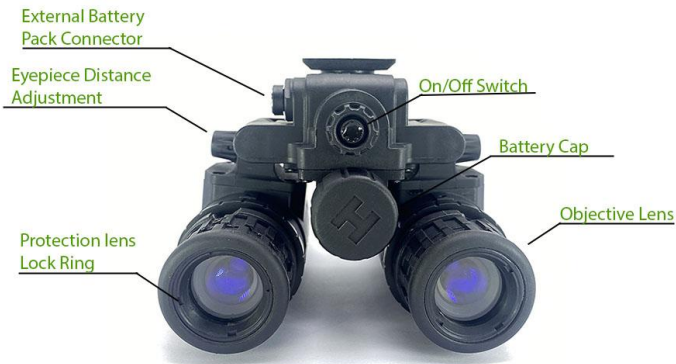

Turn the on/off switch clock wise to turn it on. Turn the on/oof switch counter-clock-wise to turn it off.

Adjust Objective lens and eyepiece lens very SLOWLY make sure the both left and right images are clear and same size. (*All unit have been adjusted before shipping out, but you might still need to adjust for own eyes. Image size is affected by eyepiece lens only)

The distance between eyes and eyepiece lens shall not be too close. The best position is the farthest from your eyes where the images are still clear.



Connect the video out port to the Mini DVR AV in port with supplied video cable to record the images from the non-dominant eye tube